

SERIES CP110 CALIBRATION CYLINDER

1. Carefully remove all packaging and pipe plugs where fitted.
2. The Calibration Cylinder must be installed in a vertical position.
3. The Calibration Cylinder should be installed using independent isolation valves.
4. Ensure both cylinder isolation valves, where fitted, are closed prior to removal.
5. Do not over tighten the nyloc retaining nuts, which are situated at the end of the four tie rods. The studs should be seated at the lower end against the mounting flange and it is normal for a gap of approximately 2mm-3mm to be visible at the top end.
6. When installing the Calibration Cylinder, if mounting flanges have been supplied, the four mounting studs, or bolts, which will be located through the flanges, must be tightened equally to avoid any excess angular force being applied to the Cylinder.
7. When initially fitting safety shrouds, carefully peel protective film from polycarbonate windows and take care not to overtighten the fastenings when assembling the shroud.

CLEANING THE CALIBRATION GLASS

1. Remove instrument from installation and carefully undo the top four nyloc nuts which retain the Calibration Cylinder and seals. Care should be taken to unscrew the nuts equally.
2. Ensure Calibration glass contains no fluid.
3. Carefully remove Cylinder from instrument base with a slow and careful upward motion.
4. Remove Cylinder, replace seals, carefully clean interior of glass tube with suitable solvent and ensure ends of Cylinder are spotlessly clean.
5. Reverse procedure to reassemble.

BES Flowmeters Pty Ltd
www.besflowmeters.com.au
sales@besflowmeters.com.au
Ph: (03) 5956 8685 or 0488 029 256

Due to the constant development and improvement of products, information may be altered or withdrawn without notice.